

Checking the firmware version

Before starting firmware update procedures, check the firmware version of the MP-800U you are using.

1. Press the **POWER** switch to turn the unit on.
Wait until the startup logo disappears and the function name ("USB" etc.) is shown at the top left of the screen.

TASCAM
MP-800U
[Startup logo]

USB
No Media
[USB function]

2. Press the main unit **HOME/MENU** button or remote control **MENU** button to open the Menu Screen.

Menu
< APS Setting >
[APS Setting menu item shown]

3. Select **Information** by turning the main unit **MULTI JOG** dial or using the remote control **◀◀/▶▶** [**</>**] buttons and press the main unit **MULTI JOG** dial or remote control **ENTER** button

The MAIN version will be shown on the screen.

Information
MAIN ver 1.01

4. Turn the main unit **MULTI JOG** dial clockwise or use the remote control **▶▶** [**>**] button to show the SUB version.

Information
SUB ver 0.31

5. Turn the main unit **MULTI JOG** dial clockwise or use the remote control **▶▶** [**>**] button to show the serial number.

Information
S/N 2540001

6. Press the main unit **MULTI JOG** dial or remote control **ENTER** button to return to the Menu Screen.

Menu
< Information >

7. Press the main unit **BACK [PAIRING]** button or remote control [**^**] button to return to the Home Screen.

Firmware update procedures (USB flash drive only)

ATTENTION

The firmware of MP-800U can be updated using a USB flash drive.

While updating, do not turn the power OFF.

Doing so could damage the firmware, making further updating and ordinary operation impossible.

Main firmware (MCU and SUB) update

1. Download the latest firmware from the TASCAM website .
<https://tascam.jp/int/product/mp-800u/support>
Decompress the downloaded file if it is in ZIP format or another compressed file type.
2. Copy the file of the firmware to the root folder of a USB flash drive. (Never change the file name.)
3. Press the **POWER** switch to turn the unit off if it's on.
4. Connect the USB flash drive to the USB FLASH DRIVE port on the front panel.
5. Press the **POWER** switch to turn the unit on.
The startup screen will be shown.

Update Mode
Crr Version 1.01

The current Main version will be shown for a few seconds.

Update Mode
Main Build 01.01

The current Sub version will be shown for a few seconds.

Update Mode
Sub Build 01.01

Version Up will be shown.

Version Up
>OK< CANCEL

6. Select **OK** by turning the main unit **MULTI JOG** dial or using the remote control **◀◀/▶▶** [**</>**] buttons, and press the main unit **MULTI JOG** dial or remote control **ENTER** button.
The current and update versions will be shown.

V1.01 >> V1.02
Push Play

7. Press the **▶ (PLAY)** button to start the update process.

Updating >----<
Don't Power Off

The number of rectangles displayed between > and < will increase dynamically to show the update progress.

Updating >■---<
Don't Power Off

ATTENTION

Never disconnect the power cable during this operation or the firmware could be miswritten causing the unit to not restart up.

When the firmware update completes, the following message appears.

Complete!
Please Power Off

8. Press the **POWER** switch to turn the unit off.
9. Disconnect the USB flash drive.
Press the **POWER** switch to turn the unit on if needed.