

HUI Emulation	2
Control Details	2
Additional Transport Keys	2
Transport Wheel	2
SElect Keys	2
F-Key Shortcuts	2
Arrow (Cursor) Keys	3
Bank Keys	3
Pan & EQ	3
Aux.....	3

HUI Emulation

For general surface control of apps not specifically covered by this document, the FW-1082 includes HUI Mode for those apps that support that control surface.

Open the FW-1082 control panel and select HUI Emulation from the Control Protocol drop down menu under the Settings tab. Follow the instructions in your app to set up a HUI, assigning the control surface MIDI Inputs & Outputs to the FW-1082 Control Port.

Control Details

Generally the FW-1082's surface controls should function as expected, controlling their like parameters in the app. For example: Faders, Mutes, Solos and Transport Control should control those parameters in the app. Exceptions and specific details follow:

Additional Transport Keys

The following FW-1082 keys emulate the specified keys on a HUI. Support of the actual functions will vary from app to app.

IN = IN

OUT = OUT

SET = MODE

<<LOCATE = RTZ

LOCATE>> = END

SHIFT = SHIFT

Transport Wheel

The Transport Wheel emulates the function of the wheel on a HUI in SCRUB mode. With the SHTL illuminated, it will emulate the function of the HUI wheel in SHTL mode.

SElect Keys

Pressing an FW-1082 SElect key alone will select that channel in the app.

Holding the red REC key while pressing a SElect key will record-enable/disable that track.

F-Key Shortcuts

Press one of the following keys or key combinations to toggle a window from front to back. If that window isn't already open, this action will open it.

F1 = Toggle Transport window

F2 = Toggle Edit window

F3 = Toggle Mix window

F4 = Toggle Markers window

SHIFT + F1 = UNDO

SHIFT + F2 = SAVE

SHIFT + F3 = ONLINE

SHIFT + F4 = QUICKPUNCH

Arrow (Cursor) Keys

The Up, Down, Left and Right Arrow keys emulate the cursor keys on a HUI.

Bank Keys

Press the BANK> key or the <BANK key, to shift the FW-1082's controls to the next 8 or previous 8 channels, respectively.

Hold SHIFT and press the BANK> key or the <BANK key, to shift the FW-1082's controls to the next or previous channel, respectively.

Pan & EQ

When the EQ/PAN LED is illuminated:

- The lowest of the four encoders shown at right will control the Pan parameter of the SElected channel in the app.
- The EQ encoders duplicate their MIDI Control mode messages when in Computer Control mode. Parameters within a DAW app may be assigned to these messages, when such a function is supported by the DAW app.

Aux

When AUX 1-4 or AUX 5-8 is illuminated:

- The four encoders control the level of Aux Sends 1 – 4 of the SElected channel in the app.
- The first encoder controls the level of Aux Sends 5 of the SElected channel in the app. (HUI only supports five aux sends.)

