

MX-2424

Jumper configurations for the **Seagate Hornet NS-20** drive when connected to the MX-2424

The jumper positions indicated below are as seen from the bottom of the drive from left to right with the SCSI connector facing away.

The indicated settings are for installation into the front panel of the MX-2424 or into an external drive enclosure with proper termination as indicated in the SCSI Instructions document. Installed jumpers are indicated with an "X".

	SCSI Address	SCSI Address	SCSI Address	Parity	Reserved	Reserved	Termination	Term Power
ID = 1	Х							X
ID = 2		Χ						X
ID = 3	Х	Х						X
ID = 4			X					X
ID = 5	Х		X					X
ID = 6		X	×					X