

US-224 Plug-in for Digital Performer Shortcuts

Based on version 1.05 of the US-224 plug-in

Transport Section

STOP	Stop, or go to Memory Start or beginning if stopped
PLAY	Play toggle
REC	One-touch recording or record toggle
REW	Fast rewinding (REW LED lit)
SET + REW	Slow rewinding (REW LED flashing)
FFWD	Fast forwarding (FFWD LED lit)
SET + FFWD	Slow forwarding (FFWD LED flashing)
<LOCATE	Go to beginning of song
LOCATE>	Go to end of song
SET + <LOCATE	Set Memory Start to the current time
SET + LOCATE>	Set Memory End to the current time
<BANK	Shift 8 tracks to the left
BANK>	Shift 8 tracks to the right
SET + <BANK	Shift 1 track to the left
SET + BANK>	Shift 1 track to the right

Channel Controls

SELECT	Select track
MUTE	Toggle track mute (or solo) state
SOLO	Toggle Global Solo state
REC + SELECT	Toggle track record enable state
SET + SELECT	Toggle track select state
SET + REC	Clear all record enables
SET + SOLO	Clear all SOLO's when SOLO LED lit -or- clear all MUTE's when SOLO LED unlit

Operations on Selected Tracks

Data wheel	Panning (coarse)
SET + Data wheel	Panning (fine)
SET + MUTE n	Toggle Send Mute n
SET + RECORD	Cycle through automation record modes
SET + PLAY	Cycle through automation play modes
SET + STOP	Turn automation off
Holding SELECT	Track “touch sensor” during automation
Holding REC	Master fader “touch sensor” during automation

Other

SELECT + MUTE n + Data wheel	Adjust send n level for selected track
SELECT + MUTE n + SET + Data wheel	Fine adjust send n level for track