

Functions added in firmware V1.30

End check function

An end check function has been added that allows you to check the ends of tracks. This is useful when you want to check how a track ends.

Setting the amount of time checked

Set how many seconds before the end of the track playback should start with this function. Use the "25 END-C" menu item to set the number of seconds before the end of the track.

Setting range: 5 (default) – 35 (in 5 second intervals)

Using this function

To start end check playback of the currently selected track (for the number of seconds set above), during playback or when paused, press and hold the **|| [PAUSE]** button and press the **▶ [PLAY]** button on the main unit or press the ENTER button on the remote control.

After playback completes, the unit returns to the call point (the point when playback last started) and pauses playback.

NOTE

- *The end check function cannot be used with data CDs.*
- *During A-B repeat playback, end check playback will start the set number of seconds before the B point, and the unit will pause at the A point when playback completes.*

Time search function

A time search function has been added that enables locating to a designated time from the start of a track.

 
Setting the time search function

Use the "26 NUM-B" menu item to set the time search function.

Options

TR (default): The time search function is disabled. Press a number button to directly select a track.

TI: The time search function is enabled. Press a number button to activate time search mode. The input position is shown with a blinking "_" (underbar).



Display during time search mode

Using this function

When time search mode is active, use the number buttons on the main unit or remote control to input minutes, seconds and frames (two digits each). When input is complete, the unit locates to the designated time. After locating, the unit will pause if it had been stopped or paused before or it will continue playback if it had been playing before.

NOTE

- *The time search function cannot be used with data CDs.*
- *The time search function cannot be used when the cue mode or flash start function is enabled.*
- *When the time search function is set to "TI", the number buttons on the main unit and the remote control cannot be used to select tracks.*
- *Press the CLEAR button on the main unit or the remote control to clear an input time.*
- *If the "17 FRAME" menu item is set to "OFF", only minutes and seconds can be input (frame input is not possible).*